

## THIRD LEG FOR HOBIE PRO ANGLER

## **TOOLS NEEDED**

 
• Set of Standard Allen Wrenches



- 1. Remove the front handle from your Pro Angler.
- 2. Place the TOP PLATE onto the front of the Pro Angler, lining up the holes on the front for the bolts that hold the handle on.
- 3. Mark the two holes on the top and then drill these into the boat using a 5/16 drill bit.
- 4. Put the TOP PLATE back on the Pro Angler and re-attach the handle using the provided  $5-16/18 \times 1.25$ " stainless steel SOCKET HEAD CAP SCREWS. Be careful not to cross thread these bolts into the nuts.
- 5. Insert the  $5/16-18 \times 1''$  BUTTON HEAD CAP SCREW through the holes on the top plate and into your kayak. It is a good idea to use a marine grade sealant to ensure no water gets into the inside of your kayak through these holes.
- 6. On the inside of the kayak, place one large WASHER and one LOCK NUT onto each bolt and tighten.
- 7. Place the TIRE onto the leg and secure with a WIRE LOCK PIN on each side of the TIRE.

To use the 3rd Leg simply insert the top of the leg into the receiver on the front of the top plate, push the push-button into to allow the leg to fully insert all the way. The push-button will pop out on top of the receiver which will not allow the leg to come out when they Pro Angler is picked up but allows the leg to rotate 360°. To remove simply push the push-button in and the leg will drop out of the receiver when the kayak is picked up.

The 3rd leg is an assist device and should not be used to support the kayak during storage or long periods of time. When using in conjunctions with the landing gear the 3rd leg should be removed first before lifting the legs of the Landing Gear. Failure to do it in this order may cause the kayak to rotate to one side causing undue stress on the 3rd Leg  $\theta$  attachment points and may cause damage. The 3rd Leg is designed to be used on smooth surfaces only and not used on ruff or off-road surfaces. BooneDOX is not responsible for any damages suffered to the kayak by installation and use of the 3rd Leg, all risks are assumed by the customer.



## **PARTS LIST**

A - 1 x TOP PLATE

B - 1 x LEG ASSEMBLY

C - 2 x SOC HD CAP SCREW

D - 2 x BUTT HD CAP SCREW

E - 2 x WASHER

F - 2 x LOCK NUT

G - 1 x TIRE

H - 2 x WIRE LOCK PIN



В



C amount

Н