

BOONE DOX

SCUPPER GEAR

Tools needed for assembly:


- 7/16 wrench
- 5/32 allen wrench

PARTS LIST

1. Stainless Steel Frame -1
2. 1/4" bolt -4
3. 1/4" lock nut -4
4. 1/4" Wire Gate Lock -2
5. KIWI Tire -2


Step 1

Fasten the 1/4" bolt to the 1/4" lock nut on the inside hole, on each side of the stainless frame

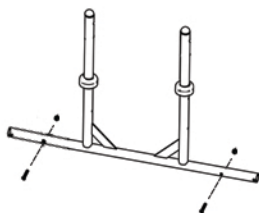

Step 2

Mount the KIWI wheel and fasten the outer 1/4" bolt to the 1/4" lock washer, on each side of the stainless frame.

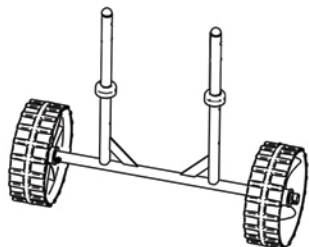

When in use with your kayak, pass the Wire Gate Pin through the pin hole to secure the kayak to the Boonedox Scupper Gear.

