



YAK TREE BRACKET

TOOLS NEEDED

- Post (not included)
- 9/16 Socket Wrench
- Lag Bolts (not included)
- Cordless Drill and Bit Set

INSTALLATION INSTRUCTIONS

1. On a pre-installed wooden post (not included) use a level to mark the spaces where each Yak Tree MAIN BRACKET will be mounted. Make sure to that your post will structurally support your desired load.


2. Using lag bolts (not included) proportionate to your support post, attach the MAIN BRACKET with the angle pointing upward.

3. Place your support beam material (such as a treated 2x4) in the MAIN BRACKET, and mark each hole to be drilled. Drill holes with a .375 bit.

4. With support beams sitting in the MAIN BRACKET pass all .375 CARRIAGE BOLTS through the holes and fit the INNER BRACKET to the inside of the beams.

5. Fasten INNER BRACKET support beams, and MAIN BRACKET using the .375 WASHER and .375 HEX NUT

6. Repeat steps 1-5 for as many Yak Tree supports as you need to install. Be sure to leave enough room between supports for the kayak or board you plan to store.

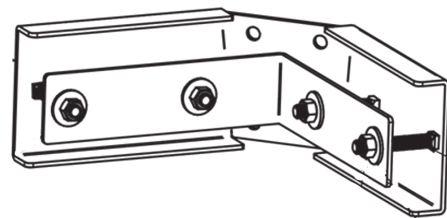

PARTS LIST

A - MAIN BRACKET

B - INNER BRACKET

C - .375 CARRIAGE BOLT

D - .375 WASHER

E - .375 HEX NUT

