




## DECKED T-BONE

### TOOLS NEEDED


- 1/2" Wrench

### INSTALLATION INSTRUCTIONS

1. Loosen the .3125 HEX BOLT/NUT at the top of the OUTER TUBE, but do not remove it completely.




2. Insert the T-shaped TANDEM TOP into the top of the OUTER TUBE.

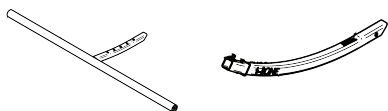


3. Align the holes in both pieces and secure with the WIRE LOCK PIN.



4. Set the end of the TANDEM TOP extrusion into the mold of the T-BONE EAR and fasten, using the 1/2" STAINLESS HEX BOLTS.

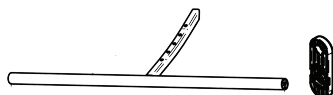

5. Pin the T-BONE into a 2" trailer hitch and adjust for height, resetting the hole alignment and wire lock pin, is necessary.

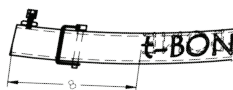

6. Tighten the 1/2" bolt to reduce vibration from the vehicle.

### USAGE NOTES

- 300 pound weight capacity
- Do not use ears as anchors for straps



### PARTS LIST

- A - 1 x TANDEM TOP
- B - 1 x OUTER TUBE
- C - 1 x .3125 HEX BOLT/NUT
- D - 1 x WIRE LOCK PIN
- E - 2 x .3125 HEX BOLT
- F - 2 x T-BONE EAR
- G - 1 x HITCH PIN
- H - 1 x HITCH CLIP

